



YDP-163/YDP-143 Quick Operation Guide

While holding down the [DEMO/SONG] or [PIANO/VOICE] button, press one of the highlighted keys shown below to select a Demo Song or set a parameter. (Refer to Diagrams 1 and 2 below.)

1 Song playback

Quick Play A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

Demo Songs C#1 D#1 F#1 G#1 A#1 B1 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

50 Preset Songs (50 Greats for the Piano) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50

Song Data Loaded from the Computer 1st Song 2nd Song 3rd Song 4th Song 5th Song 6th Song 7th Song 8th Song 9th Song 10th Song



* Supplementary information: 50 Preset Songs (50 Greats for the Piano) Song number / Song name (music book)

1	Invention No. 1	11	Perpetuum mobile	31	Träumerei	41	Melody in F
2	Invention No. 8	12	Eccossaise	32	Fröhlicher Landmann	42	Humoresque
3	Gavotte	13	Für Elise	33	La prière d'une Vierge	43	Tango (España)
4	Prelude (Wohltemperierte Klavier I No.1)	14	Marcia alla Turca	34	Dolly's Dreaming and Awakening	44	The Entertainer
5	Mennett G dur BWV.Amh.114	15	Piano Sonate op.13 "Pathétique" 2nd mov.	35	Arbesque	45	Maple Leaf Rag
6	Le Coucou	16	Piano Sonate op.27-2 "Mondschein" 1st mov.	36	Pastorale	46	La Fille aux Cheveux de Lin
7	Piano Sonate No.15 K.545 1st mov.	17	Piano Sonate op.49-2 1st mov.	37	La chevaleresque	47	Arbesque 1
8	Turkish March	18	Impromptu op.90-2	38	Liebesträume Nr.3	48	Clair de lune
9	Mennett G dur	19	Moments Musicaux op.94-3	39	Blumenlied	49	Rêverie
10	Little Serenade	20	Frühlingslied op.62-6	40	Barcarolle	50	Cakewalk

2 Voice settings

Stereophonic Optimizer A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

IAC Depth -3 -2 -1 0 +1 +2 +3 On Off

Voices Grand Piano 1 Grand Piano 2 Grand Piano 3 E.Piano 1 E.Piano 2 Harpsichord Vibraphone Jazz Organ Strings

Damper Resonance On Off

Reverb Types Recital Hall Concert Hall Chamber Club

Reverb Depth 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

Most suitable for the selected voice -1 (Voice 1) +1 (Voice 1) 0 (Voice 1) -1 (Voice 2) 0 (Voice 2) +1 (Voice 2)

Volume Balance (Dual/Duo mode) -6 -5 -4 -3 -2 -1 0 +1 +2 +3 +4 +5 +6

Touch Sensitivity Fixed Medium Hard



YDP-163/YDP-143 Quick Operation Guide

3 Metronome settings

Voice confirmation of current Tempo value

Tempo (Metronome, Songs, etc.)

Metronome Beat

Metronome Volume

Metronome +

METRONOME +

To increase the value by 1:

METRONOME + [R]

To decrease the value by 1:

METRONOME - [L]

A#1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4
1	2	3	4	5	6	7	8	9	0	10 steps decrease	Default tempo	10 steps increase	1	2	3	4	5	6	1	2	3	4	5	6	7
C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	

4 Other settings

Operation Confirmation Sounds

MIDI Transmit Channel

Transpose

MIDI Receive Channel

Auto Power Off

Local Control

Program Change

Control Change

Song Playback Channel

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																
Off	On	Off	Off	-1	-2	-3	-4	-5	-6	0 (Normal pitch)	+1	+2	+3	+4	+5	+6	Ch 1	Ch 2	Ch 3	Ch 4	Ch 5	Ch 6	Ch 7	Ch 8	Ch 9	Ch 10	Ch 11	Ch 12	Ch 13	Ch 14	Ch 15	Ch 16	All	Ch 1+2	All																
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7

5 Tuning settings

While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+R], [-L] or both buttons as shown below to fine-tune the pitch of your instrument.

To tune up (in about 0.2 Hz steps):

DEMO/SONG + [R]

To tune down (in about 0.2 Hz steps):

DEMO/SONG + [-L]

Default pitch: 440.0 Hz

DEMO/SONG + [R]

PIANO/VOICE + [-L]

6 Duo setting

While holding down the [PIANO/VOICE] button, simultaneously press the [+R] and [-L] buttons to turn Duo on or off.

To turn Duo on or off:

PIANO/VOICE + [+R]

PIANO/VOICE + [-L]

Manual Development Department
 © 2016 Yamaha Corporation
 Published 01/2016 MWAP**A0
 Printed in Vietnam

ZS24420



ZS24420